

TIBO SB200

Quick Start Guide ---

Setting Up

Please ensure that all electrical components are switched off before connecting. Your SB200 System has three optional inputs. In principle it is enough to connect one of these inputs to your TV. To achieve the best possible sound we recommend that you connect your satellite receiver, Blu-Ray or DVD player directly to the SB200 System.

The following options are possible, depending on the type and fitting of the source used:

Optical

Modern TV devices have an optical audio output (Toslink). Connect this with the input marked "Optical in" on the SB200 System

TV / DVD: Digital input (Coaxial)

To transmit the TV / DVD sound signal connect the digital coaxial output of your Blu-Ray or DVD player with the jack marked "Coaxial in" on the SB200 System.

Line In: Analogue input

If your TV only has an audio output marked "Line In" then connect it using the shielded stereo RCA cable plugged into the analogue input on the SB200 System marked "Line In".

SUB: Analogue output

Use this output when you want to connect an external active subwoofer.

Connect the Bluetooth device

- 1. Turn on the Power Switch.
- 2. Press "Mode" button on the remote control, select Bluetooth mode, the blue flashing light will appear on the TIBO SB200 display to show the device is discoverable.
- 3. On your Bluetooth device list, select the device "TIBO SB200". When pairing up

completed, the blue light will stop flashing.

TIBO

Be part of the TIBO family:
Subscribe to our YouTube channel
Like us on Facebook


Product support: www.tibo-audio.com info@tibo-audio.com




for purchasing the TIBO SB200. We are confident that it will provide reliable, high performance sound for many years to come.

Rear Panel

- . Coax In: For connecting to a monitor / TV.
- 2. Line In L / R: Left / right RCA audio input.
- 3. Sub Out: Output to connect to a subwoofer.
- 4. Optical In: For connecting to a monitor / TV.
- 5. Power Switch: On / Off.
- 6. Mains Input: Connect the power cord here.

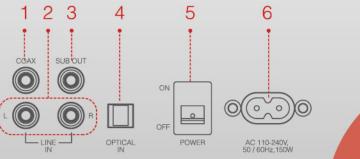

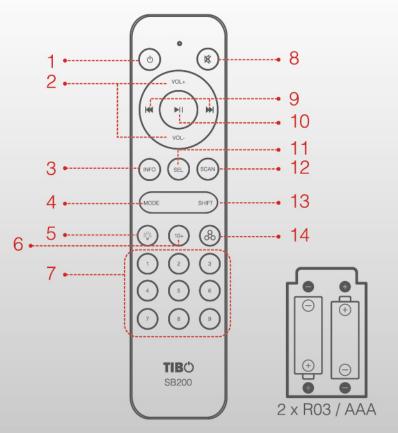

Remote Control

- Stand By: press to enter Stand by mode or return to Playback mode
- Volume: Increase / Decrease
- Info: (N/A for this model)
- 4. Mode: Press to choose between

Optical (Red Light)

Coaxial (Red +Green Light)

Line-in (Green Light)

Bluetooth modes (Blue Light)

- 5. Light: (N/A for this model)
- 6. 10+: (N/A for this model)
- 7. Pre-sets 1-9: (N/A for this model)
- 8. Mute
- 9. Skip Track Forward / Backward (Bluetooth function)
- 10. Play / Pause: (Bluetooth function)
- 11. Select: (N/A for this model)
- 12. Scan: (N/A for this model)
- 13. Shift: (N/A for this model)
- 14. Group: (N/A for this model)